

Access to the gate opener's toggle code switches is achieved by removing the tiny screw on the back cover of the gate opener (you will need a tiny phillips head screwdriver) and separating the 2 parts of the case (may need to gently "pry" the two cover pieces apart with your fingernail or a dull edged knife or screw driver). You may also have to remove the battery to have easy access to the toggle switches. Using a small pointed object (such as a paper clip) gently switch the **8 switch DOWN** to the **ON** position (it is currently "up" or "OFF"). Next, reinstall the battery and replace the back cover inserting the bottom clip into the front groove, then replace and tighten the screw. You have now re-programmed your gate opener!!!! If you have ANY problems completing the re-programming of your gate opener, please come by the office and the staff will assist you. Wednesday - Sunday from 9:00 - 5:00 P.S.: The toggle switches should be aligned as follows:

1 - up

2 - up

3 - down

4 - up

5 - down

6 - down

7 - down

8 - down

9 - up

10 - up